

Important – Please Read These Instructions Fully Before Starting Assembly

If you need have damaged or missing parts, call the Customer Service: 404-344-0000


- Check you have all the components listed on pages 2.
- Remove all parts from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assemble on a hard level surface.
- Assembly of the axles/frame will be easier with 2 people.

Instruction Sheet #08262 Rev. 3-3-16

TIE DOWN ENGINEERING • 255 Villanova Drive SW • Atlanta, GA 30336 www.tiedown.com (404) 344-0000 Fax (404) 349-0401




Please check you have all the component parts listed below

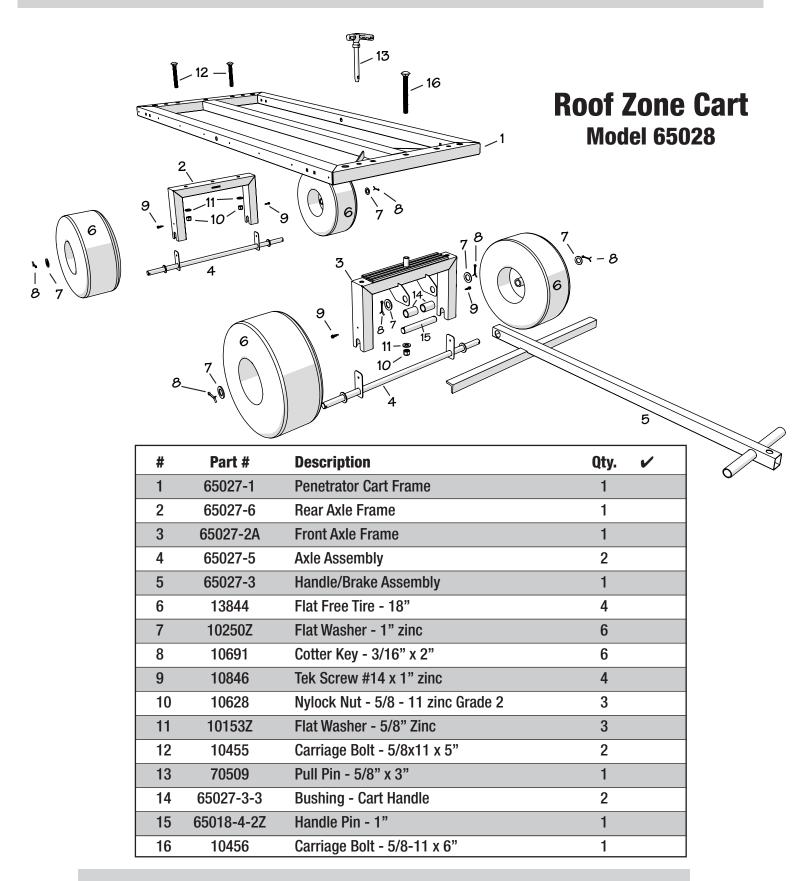

If you need have damaged or missing parts, call the Customer Service: 404-344-0000

Assembly Instructions

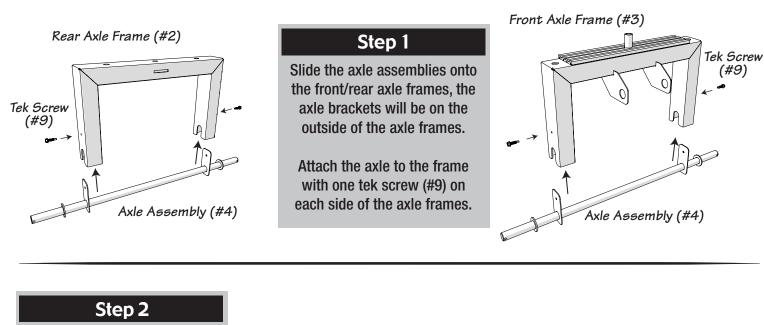


Lay the cart frame flat on hard ground. Position axle frames front and back of the cart. The axle frames will stand on thier own.

Carriage Bolt (#12)

Flat Washer (#11)

 Nylock Nut (10)



Rear Axle Frame

Step 3

Lift the rear cart frame (may require two people). Align the mounting holes with the axle and cart frame.

Insert carriage bolts thru cart frame and axle frame, attach with washers and nylock nuts. Tighten nuts/bolts.

Step 4

Lift the front cart frame (may require two people). Align the center mounting hole with the axle and cart frame.

Insert carriage bolt thru cart frame and axle frame, attach with washer and nylock nut. Tighten the nut/bolt just enough for the axle frame to turn freely (Do not over tighten). Carriage Bolt (#16)

TIE DOWN ENGINEERING • 255 Villanova Drive SW • Atlanta, GA 30336 www.tiedown.com (404) 344-0000 Fax (404) 349-0401





Assembly Instructions

Step 5

Lift the front or the rear cart (may require two people). Slide the flat free tires onto the axle.

Install a washer over the axle shaft, insert cotter key through the axle mounting hole. Split the cotter key securing the tire to the axle frame. Repeat for all four tires.

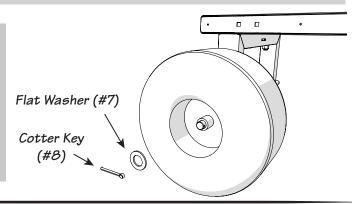

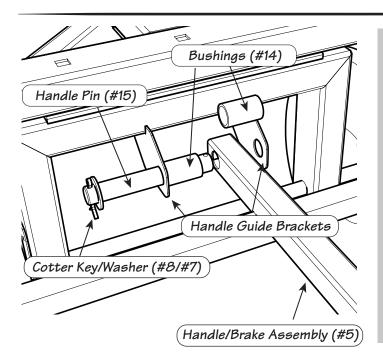

Step 6

Install and split open cotter key on ONE end of the handle pin (#15), slide on ONE washer. Insert the handle pin through the handle guide bracket on the front axle. Slide one bushing over the handle pin.


Position/align the handle assembly with the handle pin/bushing. Slide the handle pin with bushing through the handle assembly tube while aligning the second bushing with the handle pin.

Once the handle pin is aligned with the second bushing, slide the entire assembly through the opposite handle guide bracket. Slide on a flat wash, install and split open the cotter key.

Step 7

The Penetrator Roofing Cart has the option of locking the stering with a pull pin (both sides).

To lock the front stearing: place the pull pin into the smaller inside round hole.

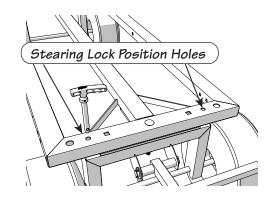



Roof Zone is a Division of **TIE DOWN ENGINEERING**

255 Villanova Drive SW • Atlanta, Georgia 30336 800-241-1806 • 404-344-0000 • Fax 404-349-0401 ISO 9001:2008 Certification Trade, brand names and drawings are the intellectual property of TIE DOWN ENGINEERING. ©2016 TIE DOWN, Inc. Instruction #08262 (E1447 Rev. 3-3-2016)

